


Syringe:

Proper alignment of the stopper when drawing up medication.¹

Example: align here for 0.7 mL dose in a 3 mL syringe.

¹Adapted from Mark SM. Aseptic technique, sterile compounding and intravenous admixture programs. In: Manual for Pharmacy Technicians, 3rd ed. Fred LY ed. Bethesda, MD: American Society of Health-System Pharmacists; 2005:pg.280.

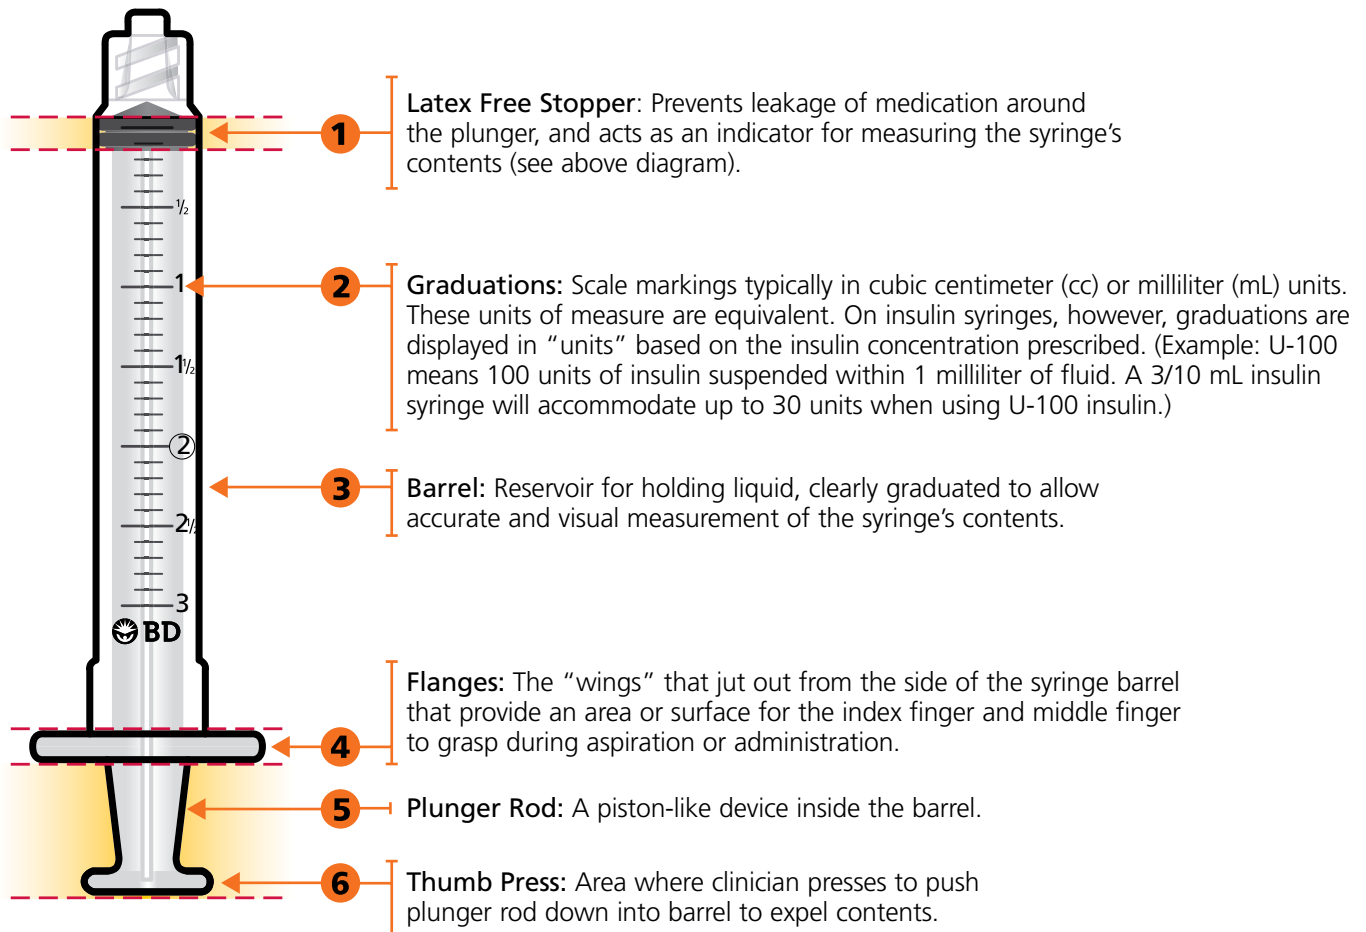

From Principles of Injection Technique, BD, 2004, pg.10 (0556). To order the full booklet, go to <http://www.bd.com/education/>, click [The BD Injection Education Program: A program to reinforce and standardize injection technique »](#)